

Installation Instructions

TPLED03

Function

It is used to display the tank pressure of LPG or CNG.
 Five-LEDs display from low-pressure to high-pressure.

Wire Connection

#1 Wiring Harness has two single leads (red and black).
 The red wire connects with switched 12Volt, the black wire connects to negative Ground.

#2 Wiring Harness has three single lead (red, green and blue), all terminated into one small connector.

The red wire is the 12V power supply to the level sensor. The green wire is the ground of the sensor. The blue wire is the signal of the level sensor. Just plug the small connector into the Pressure Gauge.



Specifications

Operating power: DC 12V
 Install away from dampness and high heat sources.

Installation

Install the display in the vehicle (dashboard). Please verify that the LEDs display the correct pressure.
 Empty – Red LED all the way to the left.
 Full – LED all the way to the right.
 If it is not correct, you can adjust the accuracy at the PRM adjustment.

Wire Diagram

