


OMNITEK CU4/6/8 - Sequential Injection System

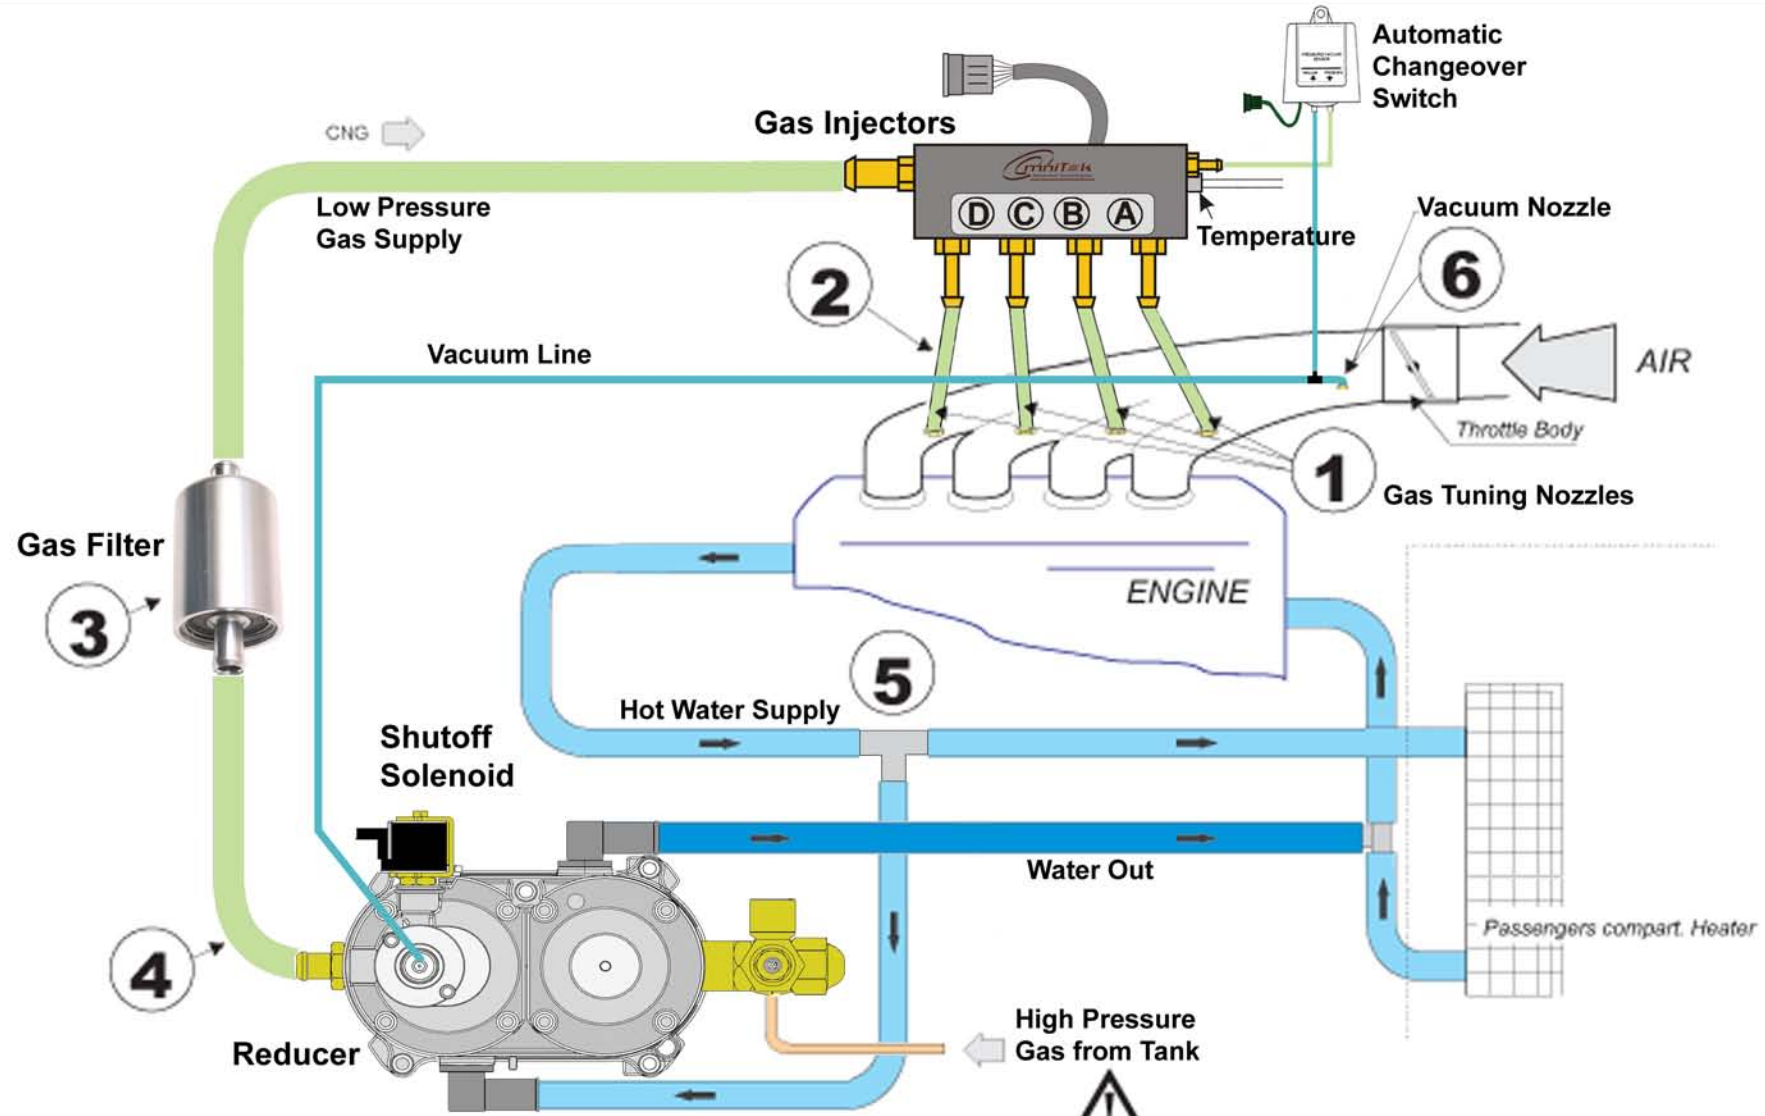

WARNING

Pls. read in the next page all relevant notes about points 1-6




WARNING






- ① Install gas nozzles as close as possible to the intake valve**
- ② Keep hoses as short as possible and ALL the same length – Max. 10 cm**
- ③ Always use a low-pressure gas filter**
- ④ Only use rubber hose compatible with natural gas**
- ⑤ Assure that water circulation to Reducer is optimized**
- ⑥ Install a separate vacuum fitting (supplied) downstream from the throttle body.**

- 1 The Petrol Injector corresponding to the **YELLOW** wire (Inj. #1) **ALWAYS** has to be cut/connected as shown.
 The corresponding Gas Injector **ALWAYS** has to be connected.

- 2 **3 Cylinder Engine**

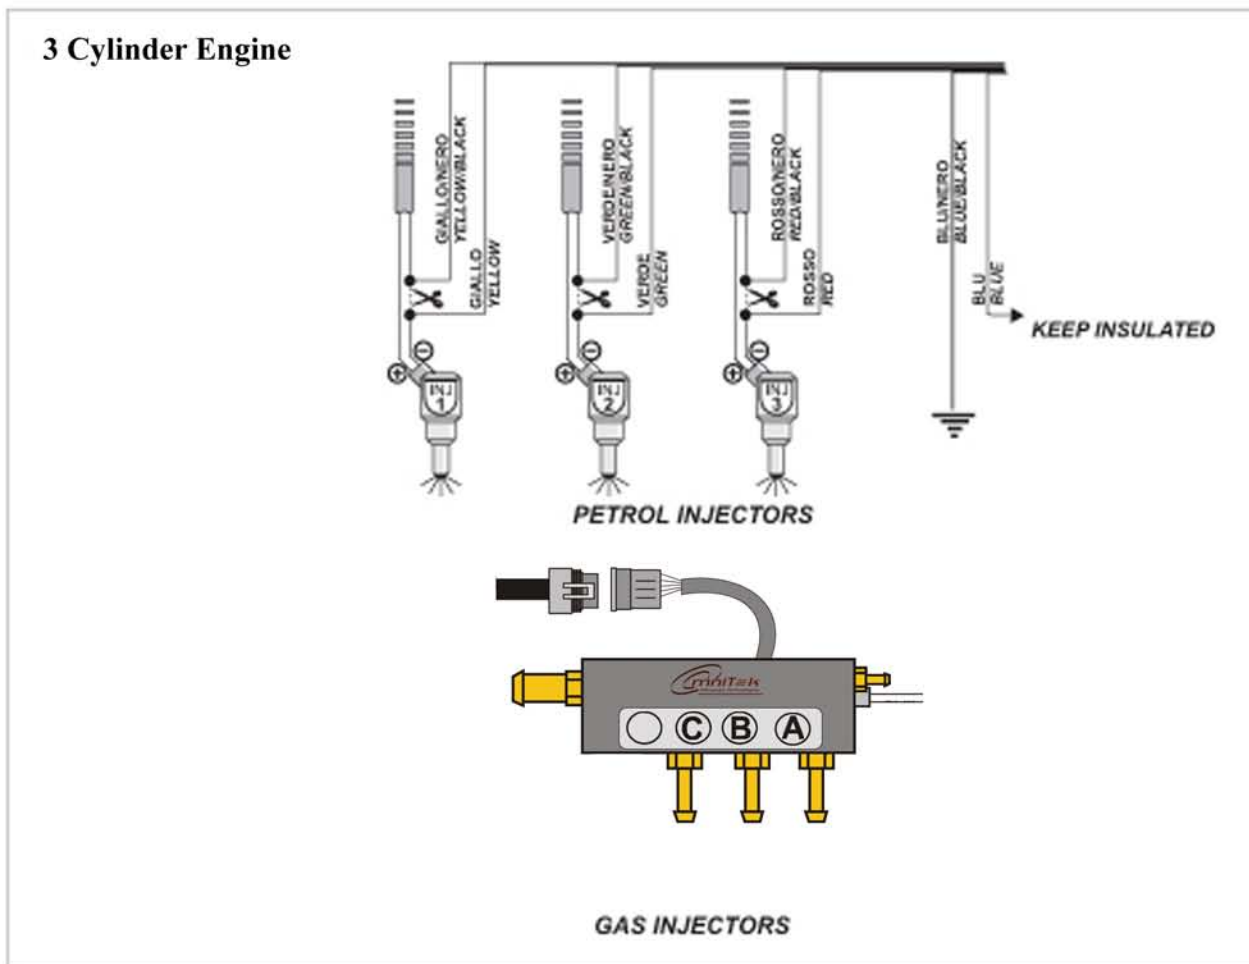

- 3 **ALWAYS** connect the Gas Injector to the Petrol Injector which has been cut with the same color wire (check color on Gas Injector connector).

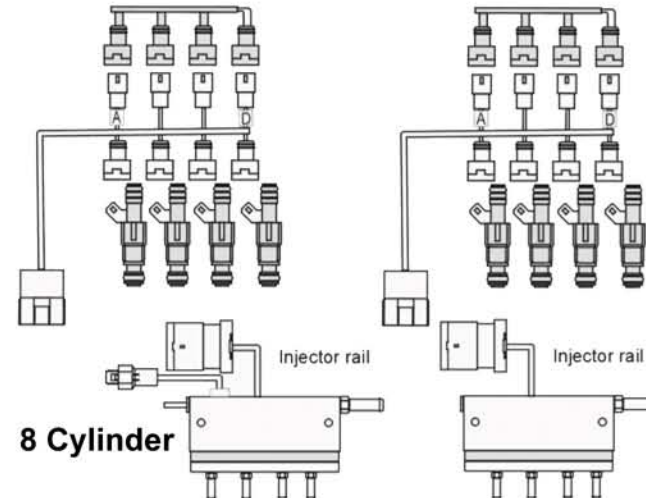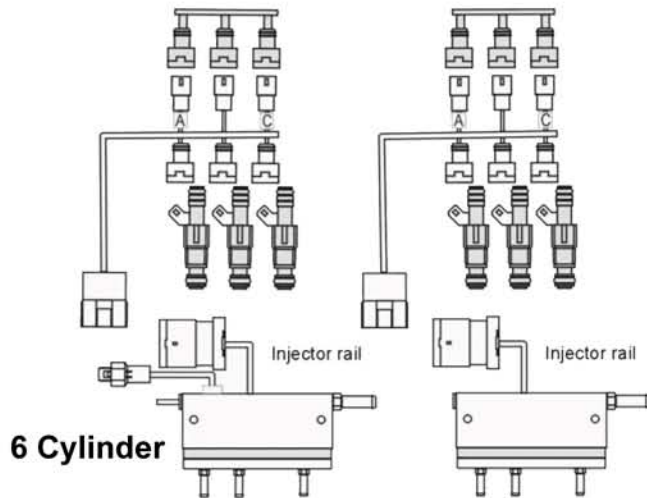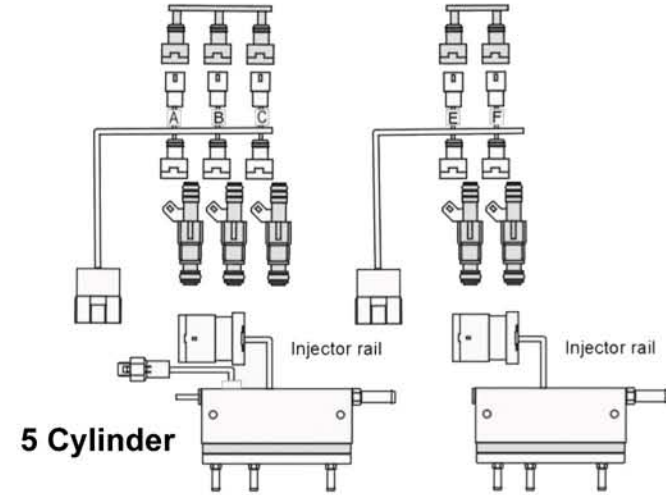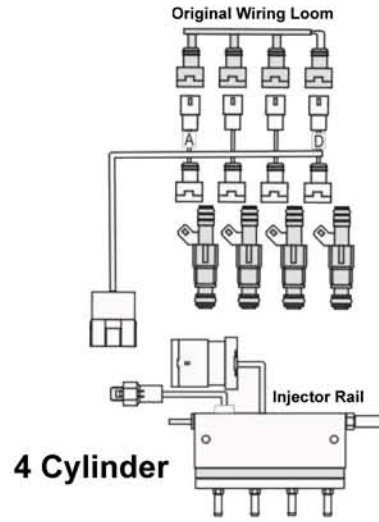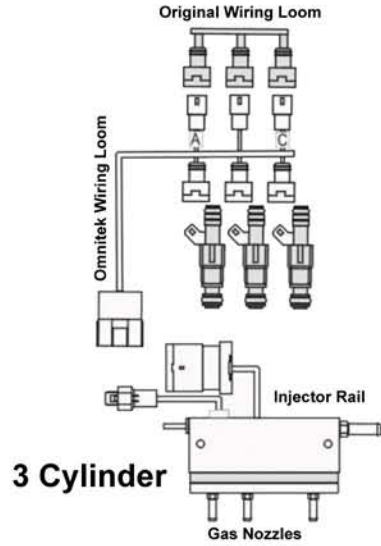

Sequential Injection System CU4

